







ORBIT FI 100

A-1pc	B-1pc	C-1pc	D-1pc	E-6pcs	F-6pcs	J-6pcs	k-1pc	
				 M6*35	 M6*10			

Step 1

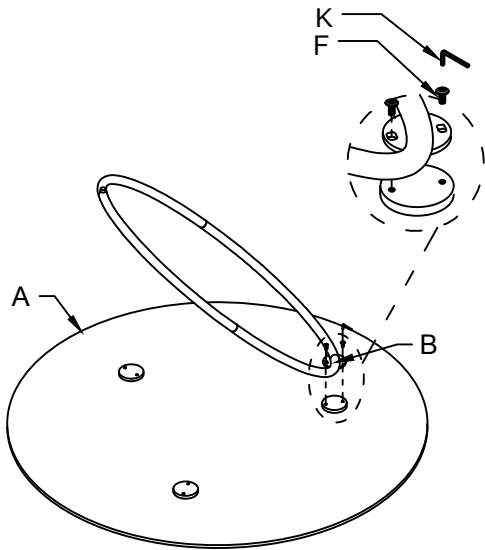


Step 2

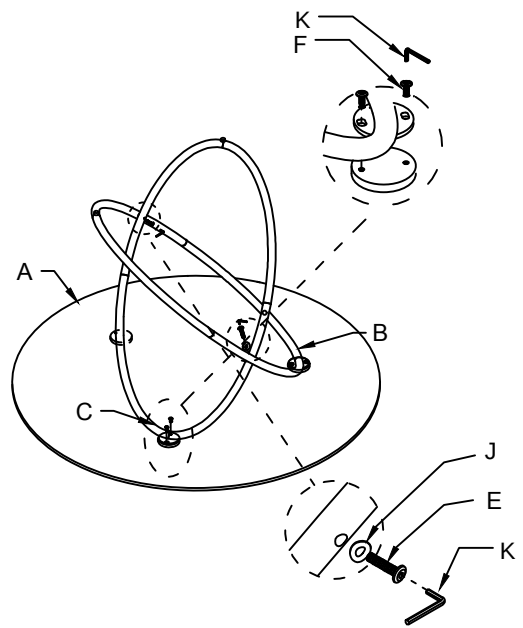

Do not tighten bolts until all screws are aligned, then fully tighten

Step 3

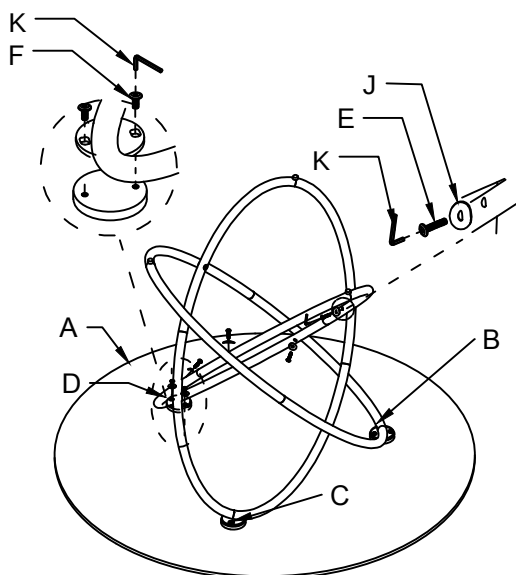

Finish

